





WEATHERING POWDER DISPLAY RACK

#WP134


Step 1: Grab the three railing pieces and the layers marked 1, 2, and 3.

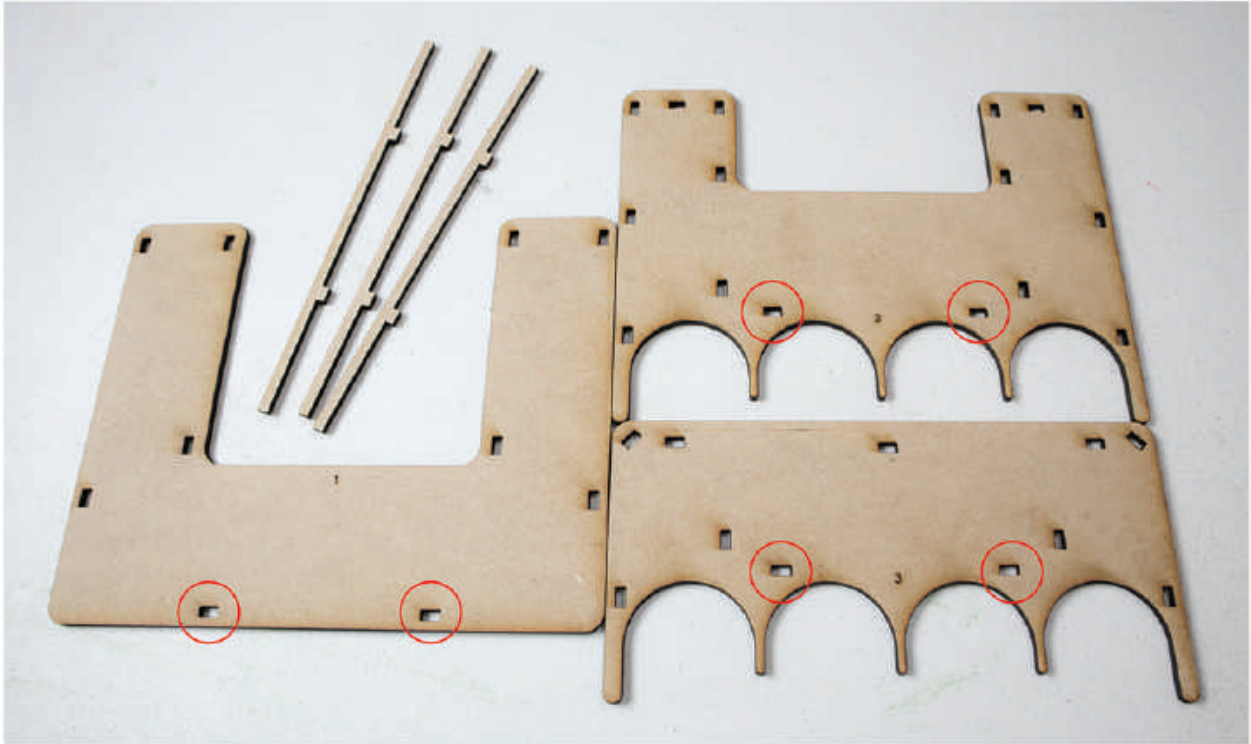


Step 2: Insert the railings into the slots as indicated above.

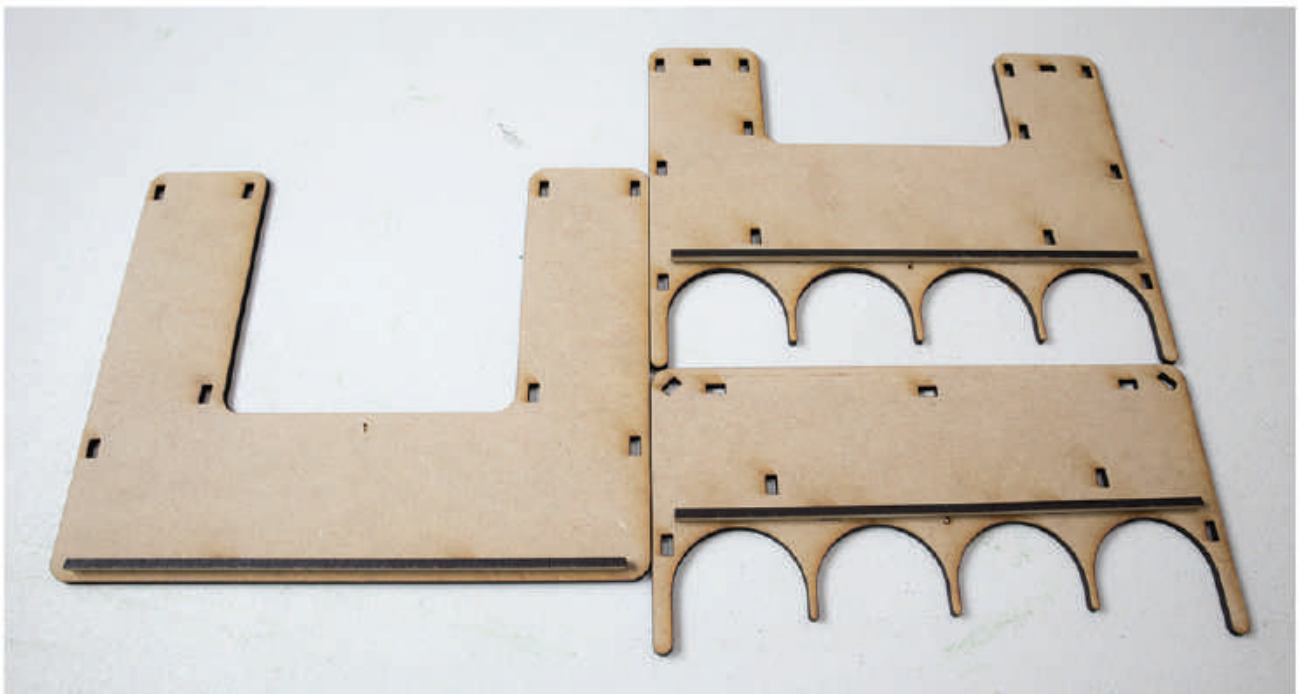


Step 3: Grab layer **1**. Insert pegs into all visible slots. Make sure they're seated securely.

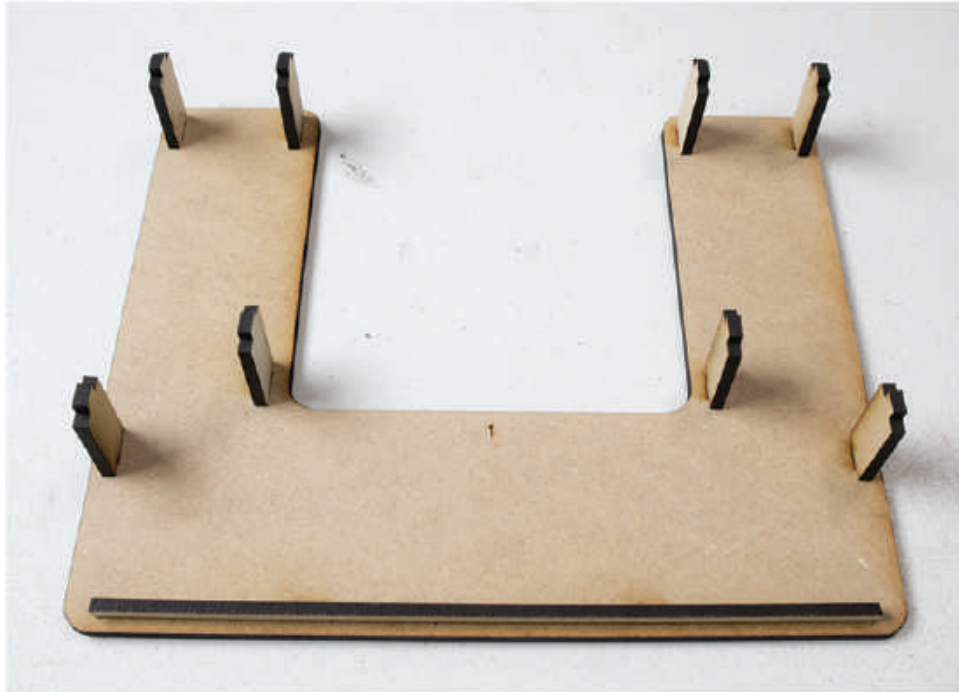

Step 4: Place layer **2** on top of the pegs. Work from one side to the other, lightly pressing on each slot to ensure alignment. **Important: Do not press in all the way until the entire layer is aligned!** Once all of the pegs are aligned, firmly press into place.

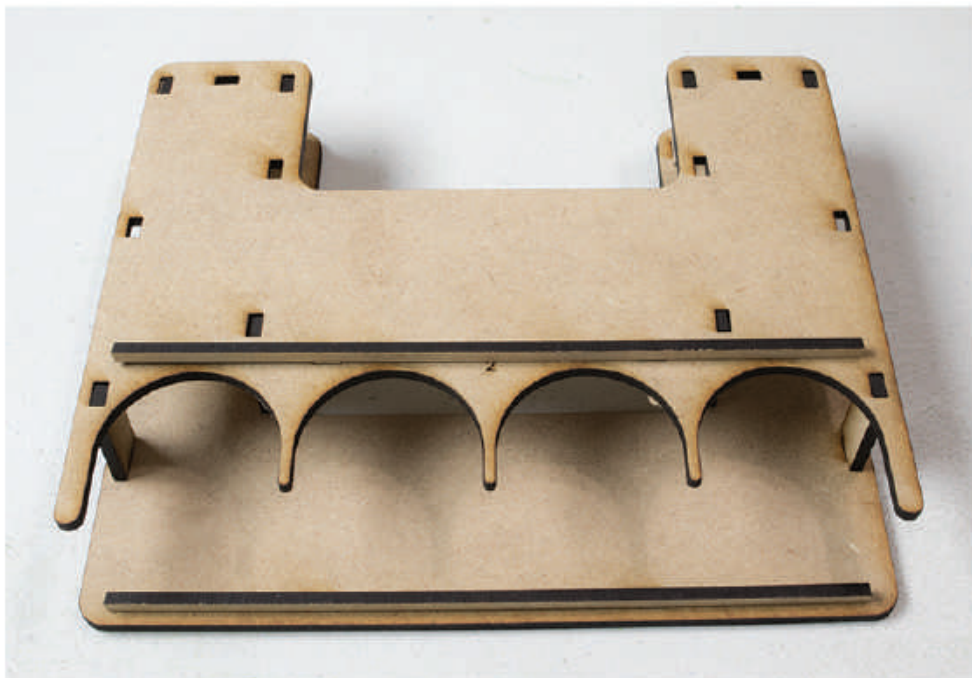


Step 5: Insert the pegs into all visible slots. Make sure they're seated securely.

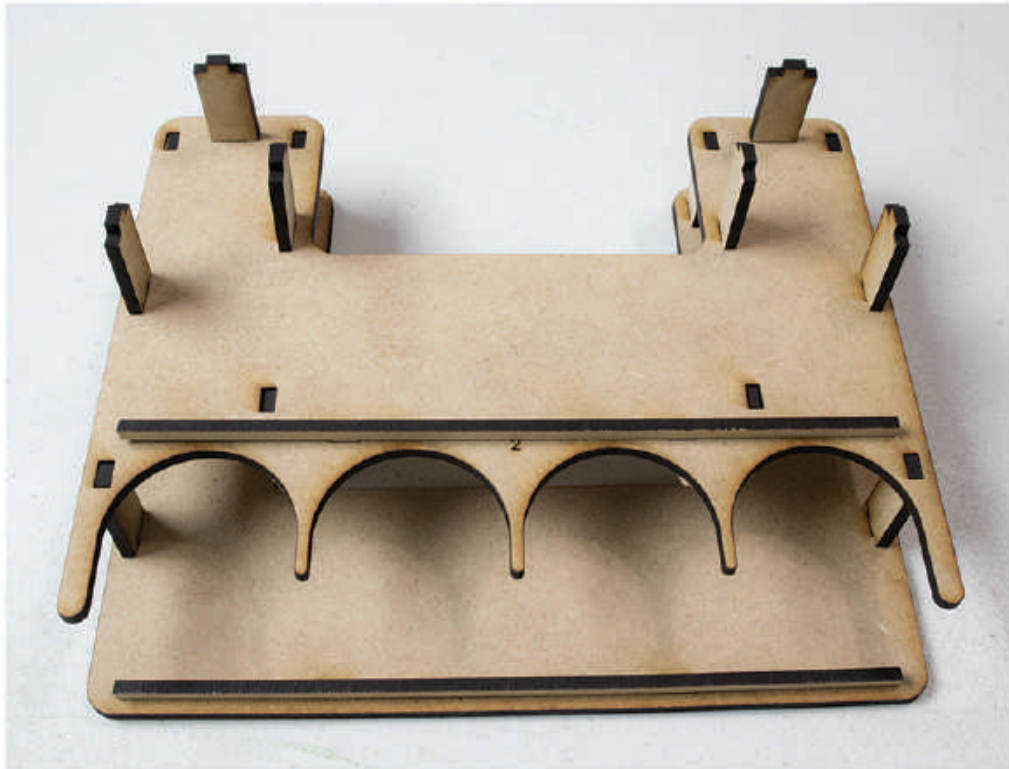

Step 6: Place layer 3 on top of the pegs. Repeat alignment instructions from Step 4.



Step 7: Insert the pegs into all visible slots. Make sure they're seated securely.

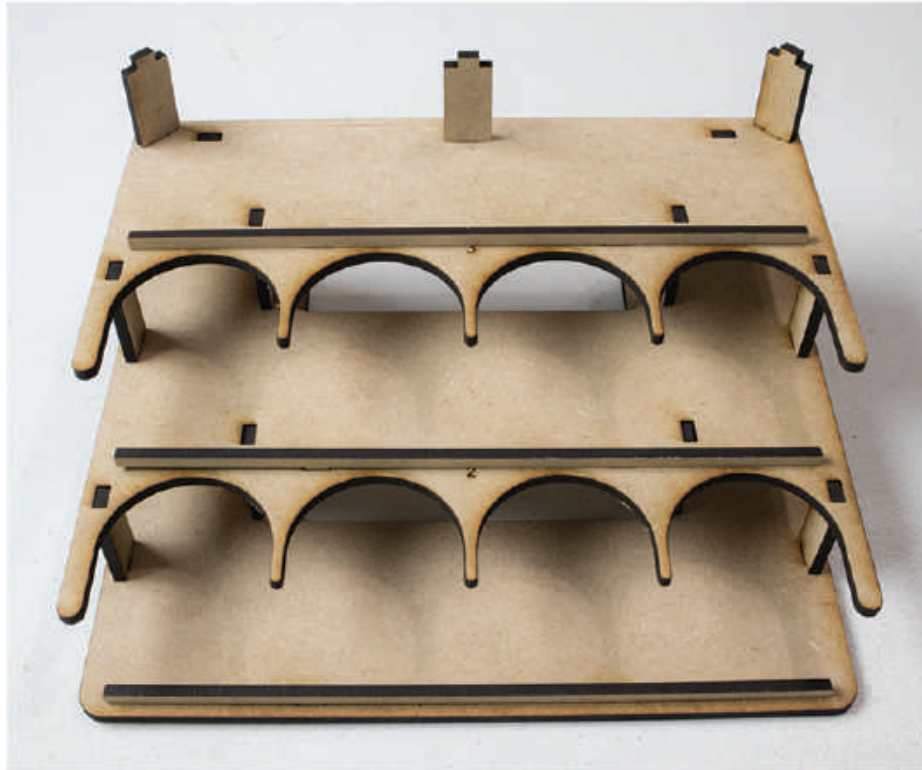

Step 8: Place layer 4 on top of the pegs. Repeat alignment instructions from Step 4.

